



## JEEP JK / JL CLASS III - 2" RECEIVER HITCH

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

**KIT CONTENTS:**  
JK/JL Receiver Hitch x1

**TOOLS NEEDED:**  
5/8 Wrench or Socket  
10mm Wrench or Socket  
18mm Wrench or Socket

**HARDWARE INCLUDED:**  
7/16-14 x 4.5 Hex Head Bolts x4  
7/16 Lock Washer x4

**IMPORTANT INFORMATION:**  
Do not exceed 2,000 lbs factory towing capacity of the Jeep JK and do exceed a maximum tongue weight of 350 lbs.




**Torque Specs:**

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





## JEEP JK INSTALLATION INSTRUCTIONS

1. For vehicles equipped with OEM Tow Hook: Remove the factory hardware securing the factory hook with a 18mm wrench. Remove the tow hook bracket. **See Photo 1.** Use caution to make sure muffler is not hot.
2. Install the new Rough Country bracket in the same location as the stock bracket was removed and using the 4 supplied 7/16 bolts, lock washers. **See Photo 2.** The new bracket will utilize 4 of the factory holes in the frame as the stock bracket only used 3. Torque hardware to 50 ft/lbs using a 5/8 socket.

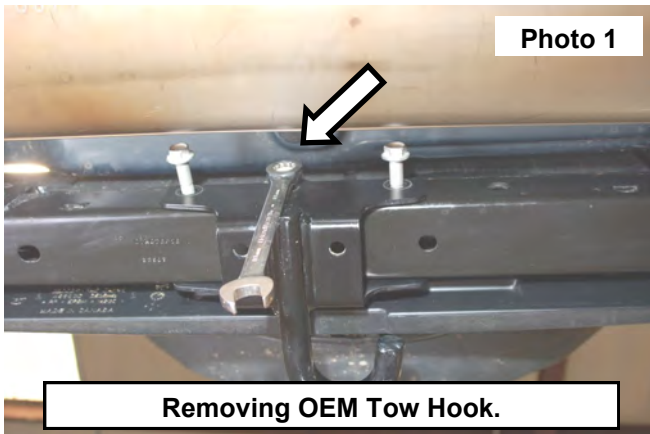


## JEEP JL INSTALLATION INSTRUCTIONS

1. Using a 10mm socket remove the 2 bolts in the bottom of the bumper brace. Then remove the 2 bolts from the inner side of the frame securing the bumper brace to the frame using an 18mm socket. **See Photo 1.** Use caution to make sure muffler is not hot.
2. Remove bumper brace. **See Photo 2.** This brace will not be reused.

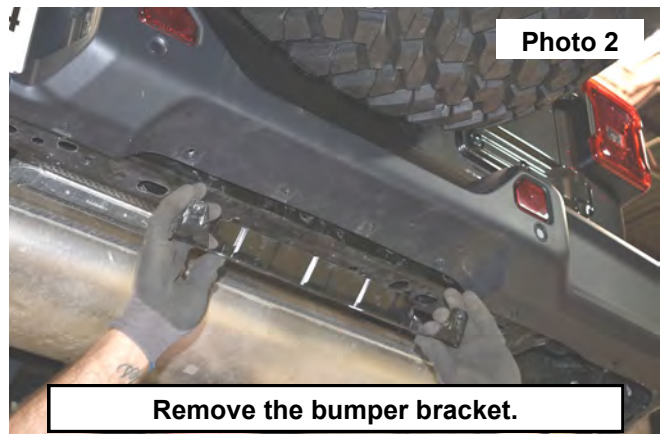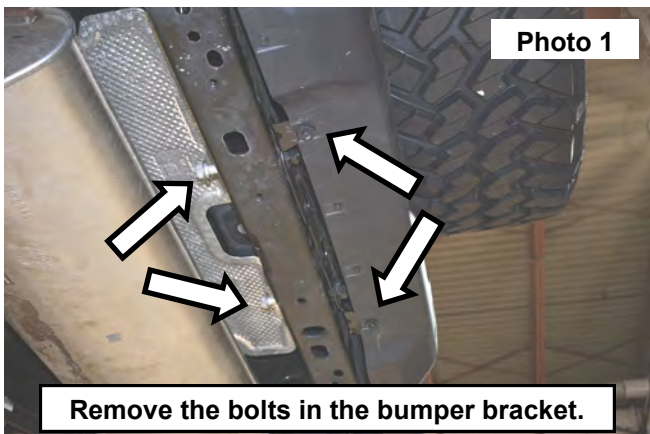

3. Install the new receiver hitch onto the frame of the vehicle. **See Photo 3.**
4. Install the new Rough Country bracket using the 4 supplied 7/16 bolts, lock washers. **See Photo 4.** Torque hardware to 50 ft/lbs using a 5/8 socket.

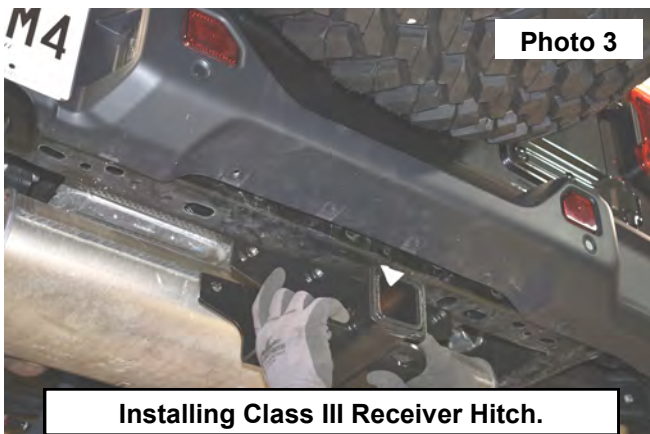

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

