

## TOYOTA 2016-22 TACOMA FOG LIGHT KIT

**Thank you for choosing Rough Country for all your vehicle needs.**

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

QR Code for installation video



**KIT CONTENTS:**  
 Dr. Side Fog Light Bracket  
 Pass. Side Fog Light Bracket  
 Dr. Side Bezel  
 Pass. Side Bezel  
 Wiring Harness x2  
 LED Light Pair x1

**TOOLS REQUIRED:**  
 Phillips Head Screwdriver

### ▲ NOTICE

Supplied plug and play harness only works with vehicles that are equipped with factory fog lights. If the vehicle did not come with factory fog lights, the round lights will need to be wired using the harness that comes with the round lights.





### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



## INSTALLATION INSTRUCTIONS



1. Unplug the factory fog light. **See Photo 1.**
2. Use a Phillips head screwdriver to remove the screw holding the factory fog light housing. **See Photo 2.**
3. Remove factory fog light housing from vehicle.

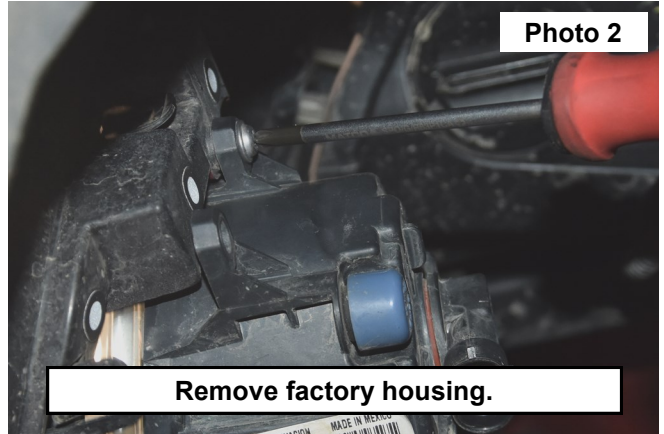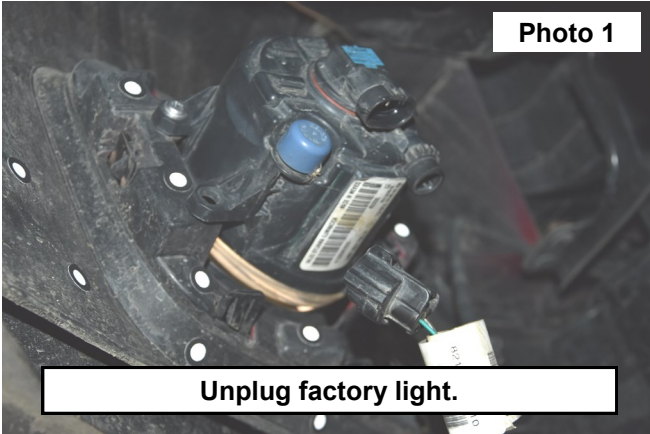


4. Use a flat pry tool to remove the factory fog light bezel. **See Photo 3 and Photo 4.**



5. Install the LED lights onto the driver side and passenger side brackets using the hardware that comes with the lights. Tighten with a 13mm wrench. **See Photo 5.**
6. Install the bracket/light assemblies into the respective sides. Place the two prongs into the factory slots and use the factory Phillips head screw to secure. Tighten with Phillips head screwdriver. **See Photo 6.**

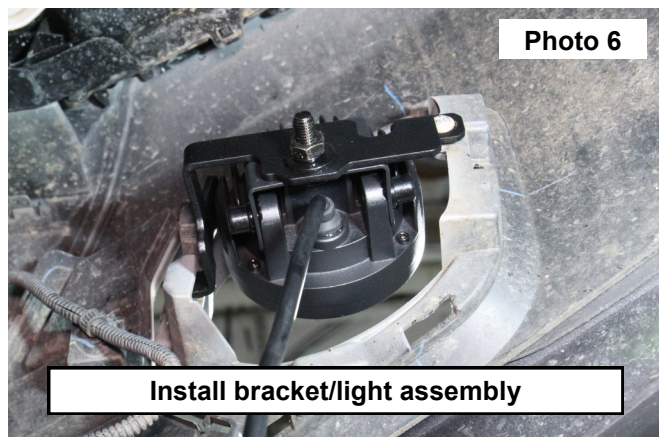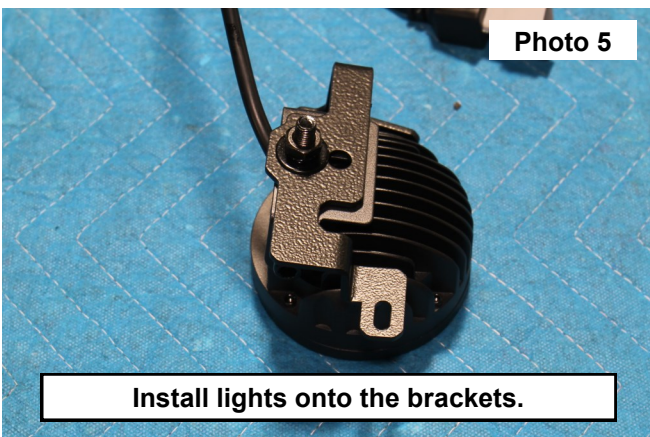

7. Install replacement bezel and fog light assembly into factory bumper. **See Photo 7.**
8. Connect supplied wiring harness to the LED light. Connect the wiring harness to the factory fog light connector. **See Photo 8.**

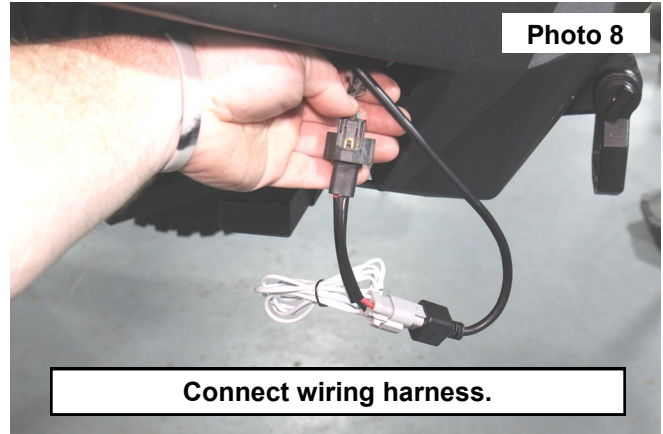

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

