

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

921SRB071791A

### TOYOTA 2007-21 TUNDRA CREWMAX HD2 STEP

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

#### KIT CONTENTS:

Step Rails x2  
Dr. Front Bracket x1  
Pass. Front Bracket x1  
Dr. Side Bracket x2  
Pass. Side Bracket x2  
Tread Plate x4  
Front End Cap x2  
Rear End Cap x2

#### TOOLS NEEDED:

10mm Wrench or Socket  
13mm Wrench or Socket

#### HARDWARE INCLUDED:

12 - 8mm x 25mm Bolt  
12 - 8mm Oversize Washer  
12 - 8mm Lock Washer  
8 - 6mm x 15mm Button Head Bolt  
8 - 6mm Hex Nut  
24 - 8mm Self Threading Nut  
12 - 6mm Lock Nut  
20 - 6mm Flat Washer  
12 - 6mm x 20mm Bolt



#### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





## HD2 BOARD ASSEMBLY

1. Place molded tread plate onto the running board by aligning the pegs with the holes in the step board. **See Photo 1.**
2. Secure the tread plate to the step board with the supplied self-threading nut using a 13mm socket. **See Photo 2.**





3. Place (1) supplied 6mm x 20mm bolt in each track for each bracket on one side of the vehicle.
4. Place (2) 6mm finish nuts into the track on the underside of the step board. **See Photo 3.**
5. Use (2) supplied 6mm lock washers and button head bolts to secure the endcap to the step board. Tighten with a 4mm Allen wrench. **See Photo 4.**

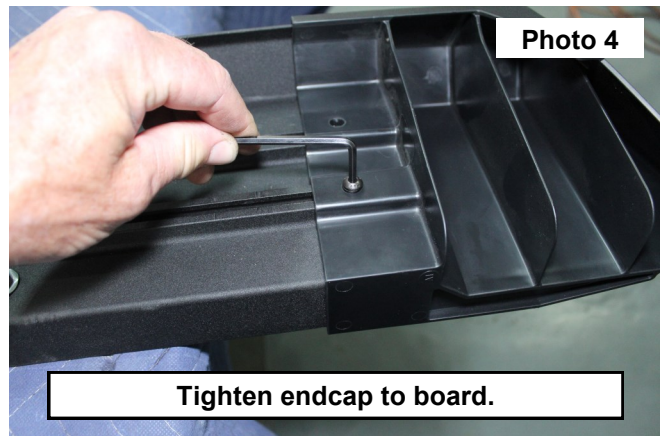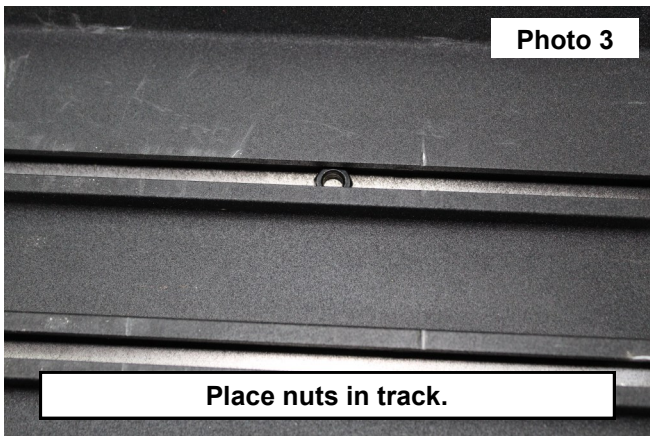

6. Repeat Step 4 to install the other end cap.
7. Repeat Step 1 through Step 6 for other side of vehicle.

## INSTALLATION INSTRUCTIONS

1. Locate the factory mounting holes in the rocker panel of the vehicle.
2. Install the front bracket using the supplied (2) 8mm oversize washer, lock washer and bolt. Use a 13mm wrench to tighten. **See Photo 1.**
3. Install the middle and rear brackets using the supplied (2) 8mm oversize washer, lock washer and bolt. Use a 13mm wrench to tighten. **See Photo 2.**

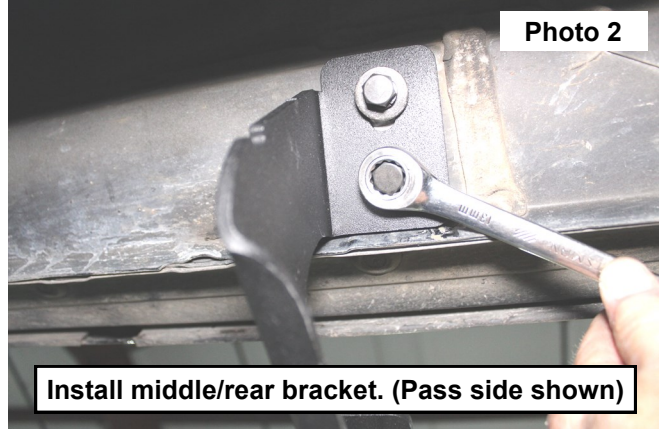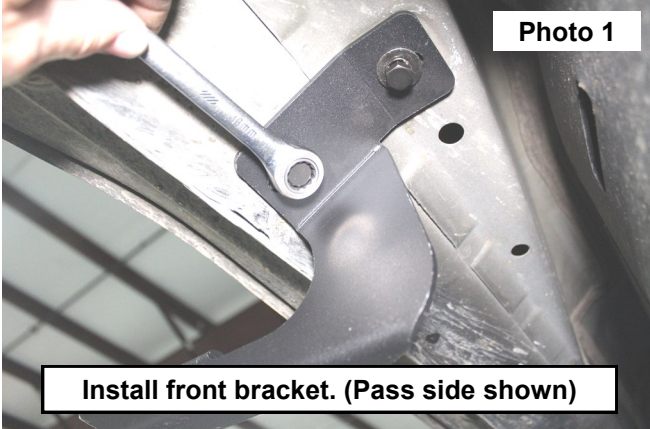

4. Align the bolts in the track of the assembled step boards with the slots of the brackets. Use the supplied 6mm washer and lock nut to secure. Use a 10mm wrench to tighten. **See Photo 3.**
5. Repeat for other side.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

