



FK32 TOYOTA TUNDRA BRAKE LINE AND ABS WIRE RELOCATION KIT

Part Number	Description	Quantity
3199908	ABS wire relocation plate	1
3199909	Brake line relocation plate	1
6151021	Bolt M8 x 20 x 1.25P	2
6151032	Nyloc Nut M8 x 1.25P	2
4581044	Flat Washer 8mm	4

ABS wire relocation

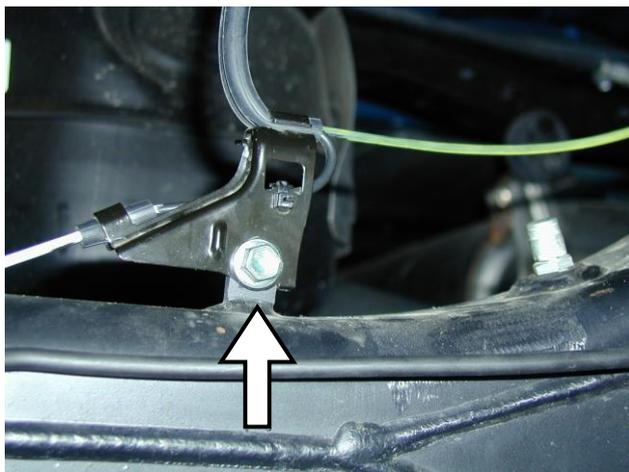


1. Remove bolt securing ABS wire bracket to rear axle housing as shown by arrow.

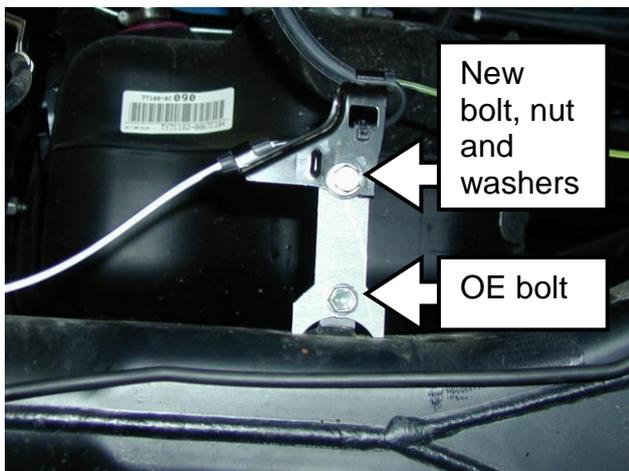


2. Fit relocation plate to axle housing using OE bolt as shown.
3. Secure ABS wire bracket to top of relocation plate using M8 bolt, washers and nyloc nut supplied in kit.

Ensure ABS wire has still some free play and is not under tension after relocation plate has been fitted.


Brake line relocation

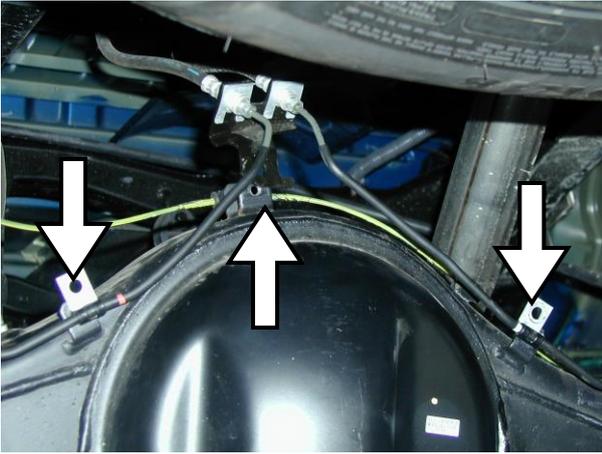

1. Remove bolts securing brake line as shown by arrows.

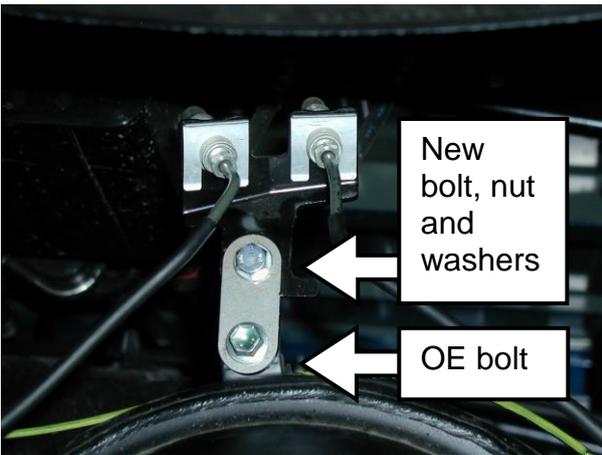

2. Fit relocation plate to axle housing using OE bolt as shown by arrow.
3. Fit brake line bracket to top of relocation plate using M8 bolt, washers and nyloc nut supplied in kit.

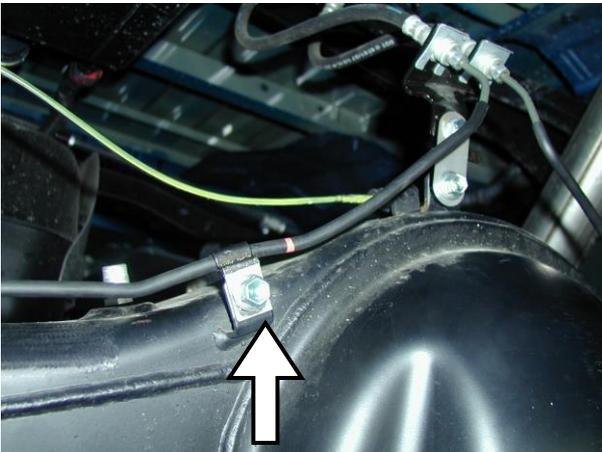

4. Rotate clip shown by arrow so that the brake line is positioned above the bolt.
5. Repeat for right hand side of axle housing.
6. Secure clips using OE bolts.



7. Double check all fasteners have been tightened securely.