



OLD MAN EMU

FITTING INSTRUCTIONS

FK83

REAR BUMP SPACER FITTING KIT TO SUIT NAVARA D23


KIT CONTENTS

DESCRIPTION
BUMP SPACER PLATE

QTY.
2

TOOLS REQUIRED
RATCHET & 14MM SOCKET
TORQUE WRENCH


FITTING PROCEDURE

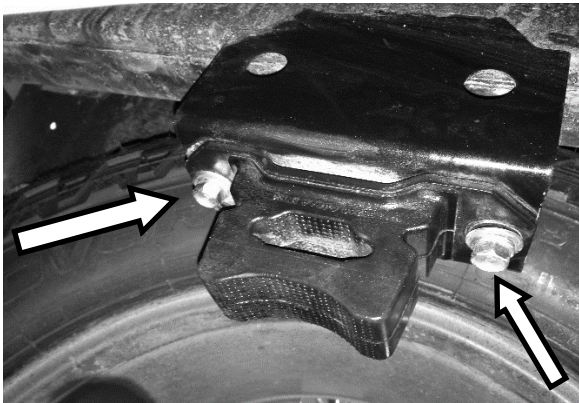

1. LOCATE AND REMOVE THE TWO M12 BOLTS WHICH LOCATE THE BUMPSTOP ON THE VEHICLE.

TOOLS REQUIRED

- RACKET AND 14MM SOCKET

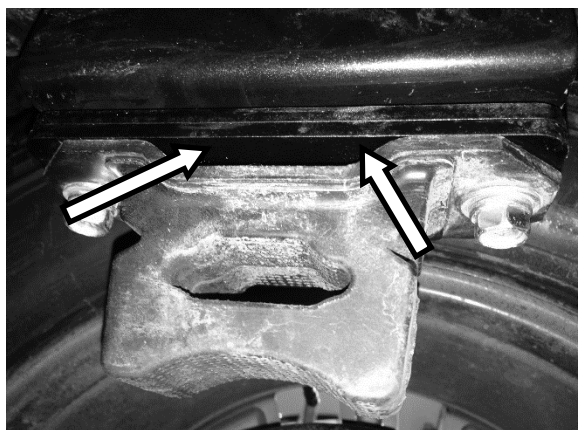

2. INSERT THE BUMP SPACER PLATE UNDERNEATH THE BUMPSTOP AND RE-ATTACH THE RUBBER BUMP STOP USING THE ORIGINAL BOLTS. TORQUE BOLTS TO MANUFACTURES SPECIFICATIONS.

PARTS REQUIRED

- REAR BUMP SPACER PLATE
- ORIGINAL M12 BOLTS
- TORQUE WRENCH